


## USER'S MANUAL


### Sectional Sofa HV10301




( A+F )

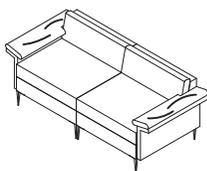


( A+B )

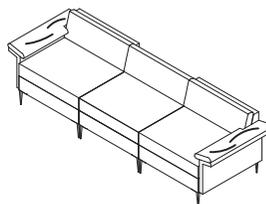


( A+B+C )

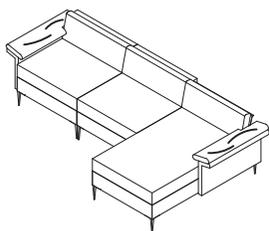


( A+B+D )

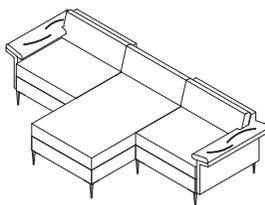


( A+B+D )

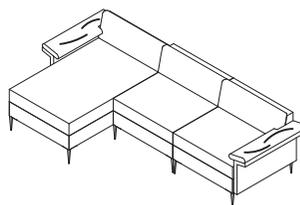

( A+B+D )


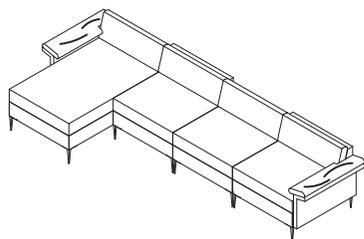


( A+B+C+D )

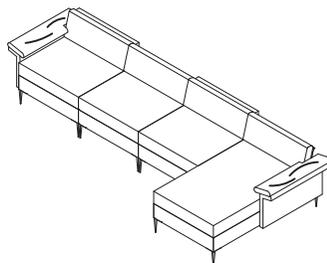

( A+B+C+D )

**A**

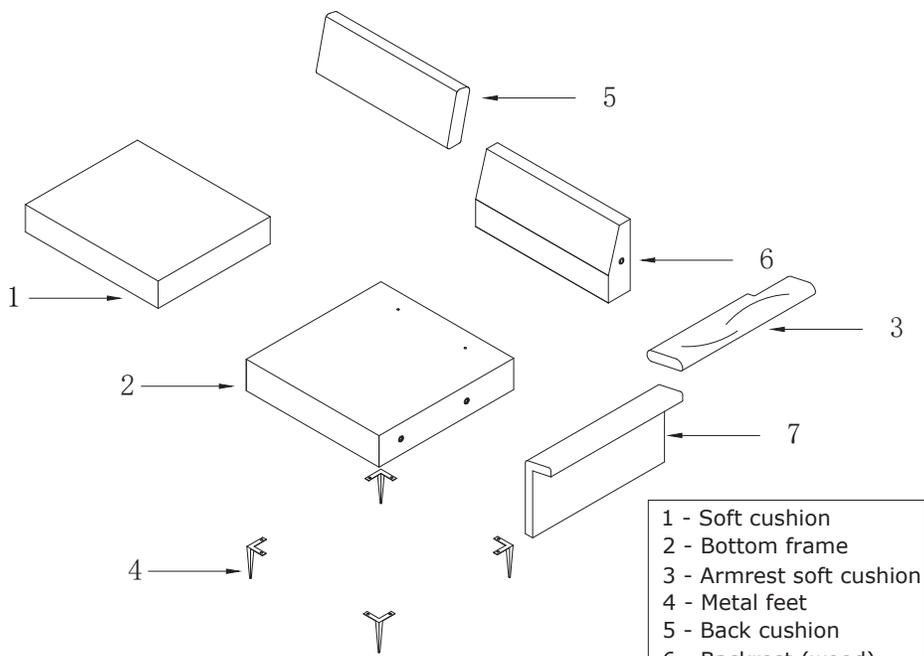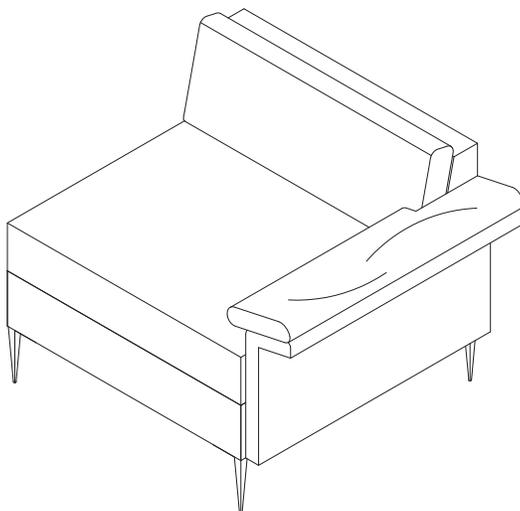

(A - exploded view)

---

# Accessories list-A

---

Handle screw



**a** x4

M8\*40

Handle screw



**b** x3

M10\*40

Hand knob



**c** x6

M8

---

Screw rod



**d** x1

M8\*80


Screw



**e** x8

M8\*25

Nylon gasket

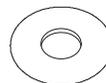

**f** x8

M8

---


Allen key



**g** x1

M6

Open end wrench

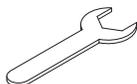

**h** x1

14mm

Nut



**j** x1

M8

Gasket



**l** x1

M8


Note: Some connectors are used as a combination of modules, and some combinations will have remaining connectors, which is normal.

---

# Module A


---

(step 1)

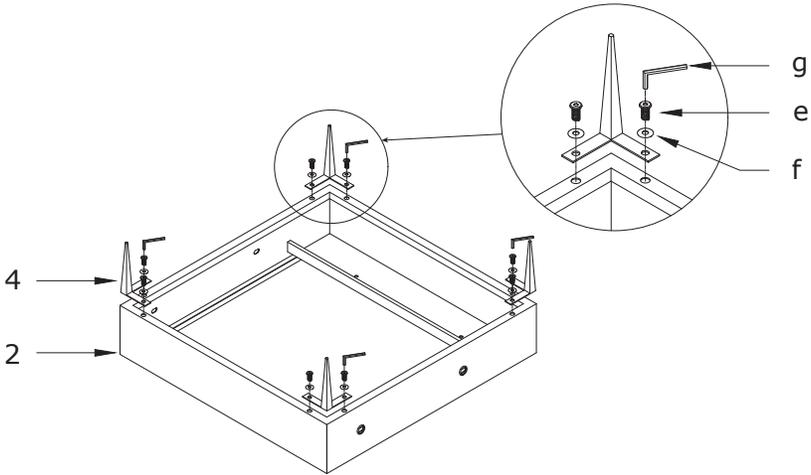

---

(step 2)

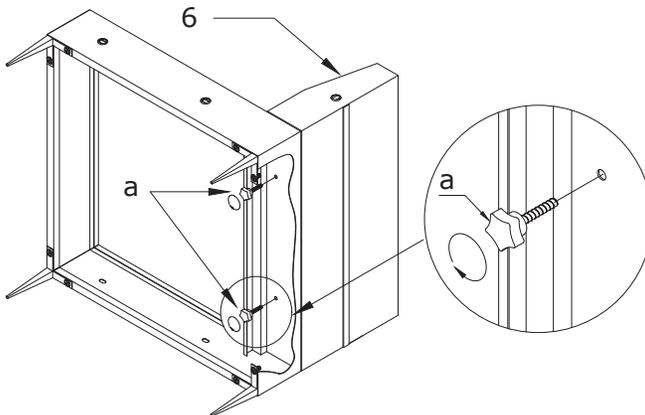

**Note:** First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.


---

# Module A

---


(step 3)



**Note:** First connect the backrest and armrest, but do not tighten, then connect the bottom frame and armrest, and finally tighten them in turn.

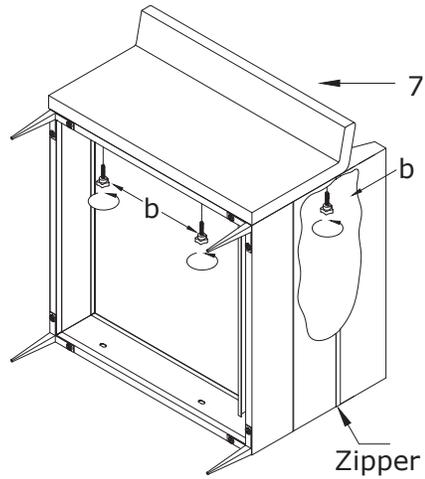

---

(step 4)

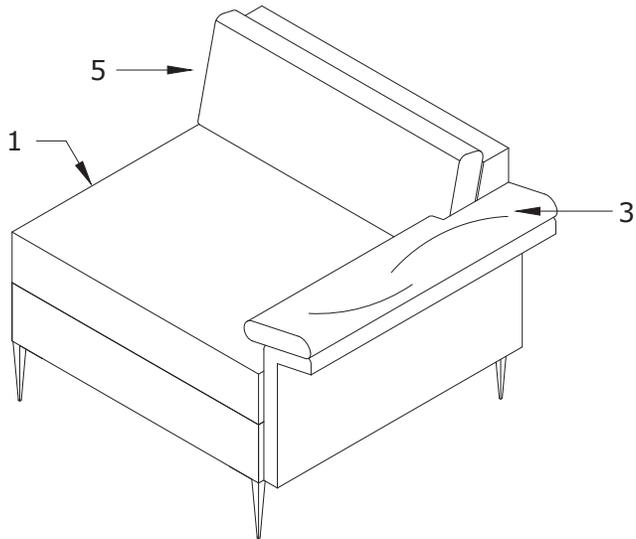

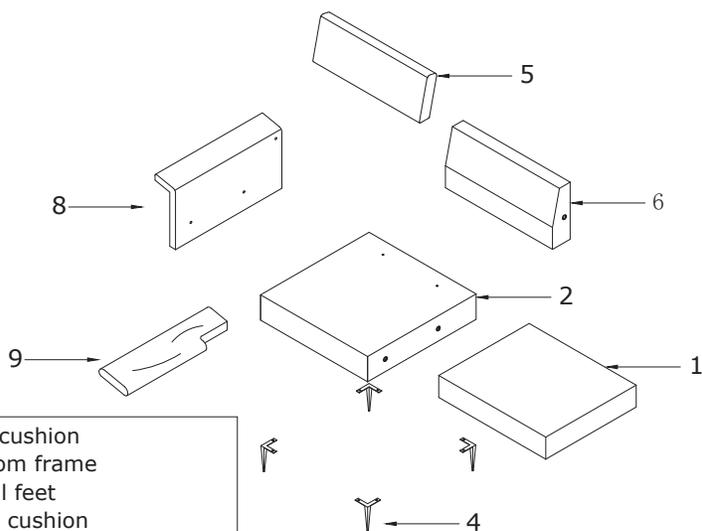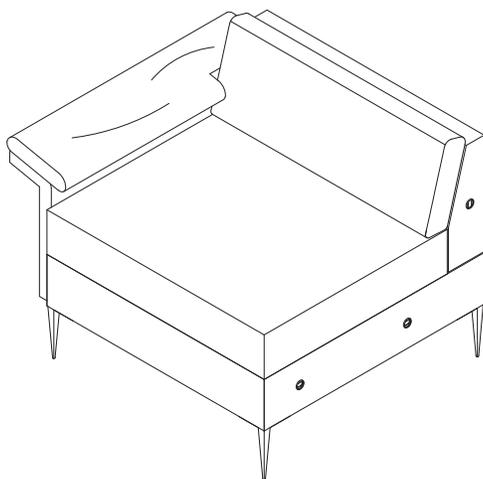**B**

- 1 - Soft cushion
- 2 - Bottom frame
- 4 - Metal feet
- 5 - Back cushion
- 6 - Backrest (wood)
- 8 - Right armrest
- 9 - Armrest soft cushion(R)

(B - exploded view)

---

# Accessories list-B

---

Handle screw



**a** x4

M8\*40

Handle screw



**b** x3

M10\*40

Hand knob



**c** x3

M8

Screw



**e** x8

M8\*25

Nylon gasket



**f** x8

M8


---

---

## Module B

---

(step 1)

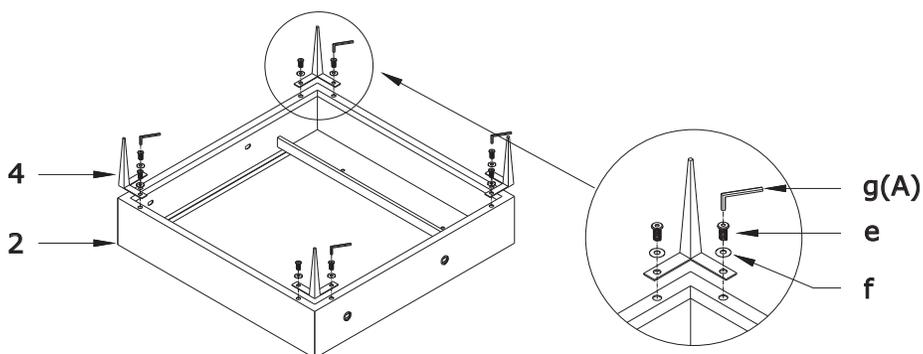


---

# Module B

---

(step 2)


**Note:** First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.

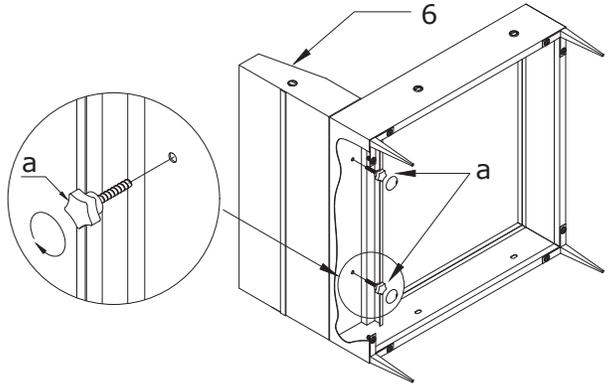

---

(step 3)

**Note:** First connect the backrest and armrest, but do not tighten, then connect the bottom frame and armrest, and finally tighten them in turn.

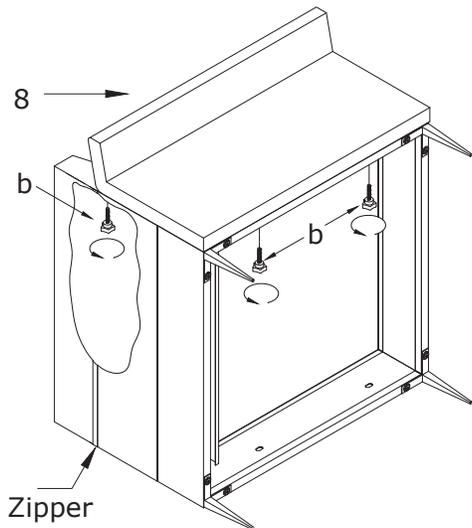


---

# Module B


---


(step 4)

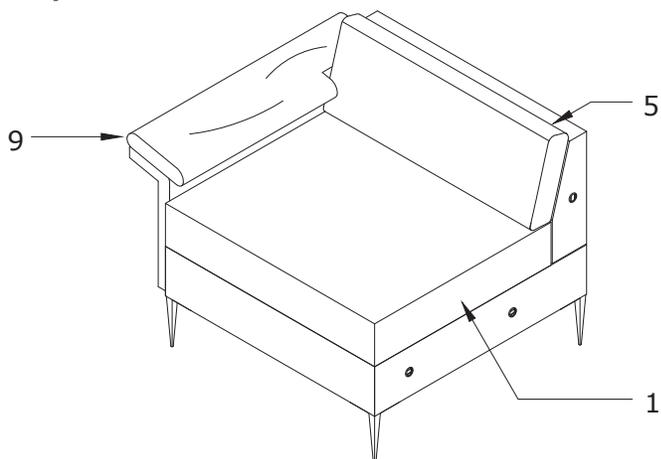

---

**C**

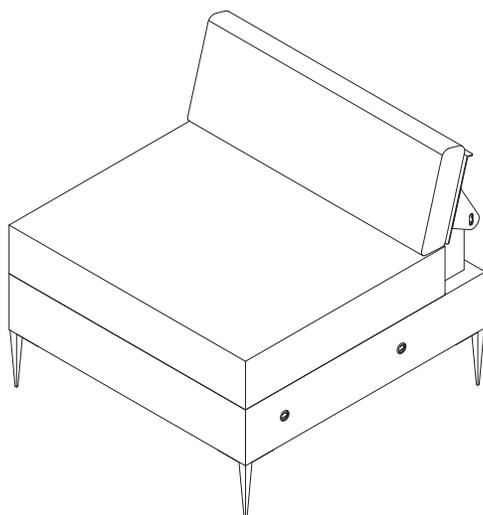

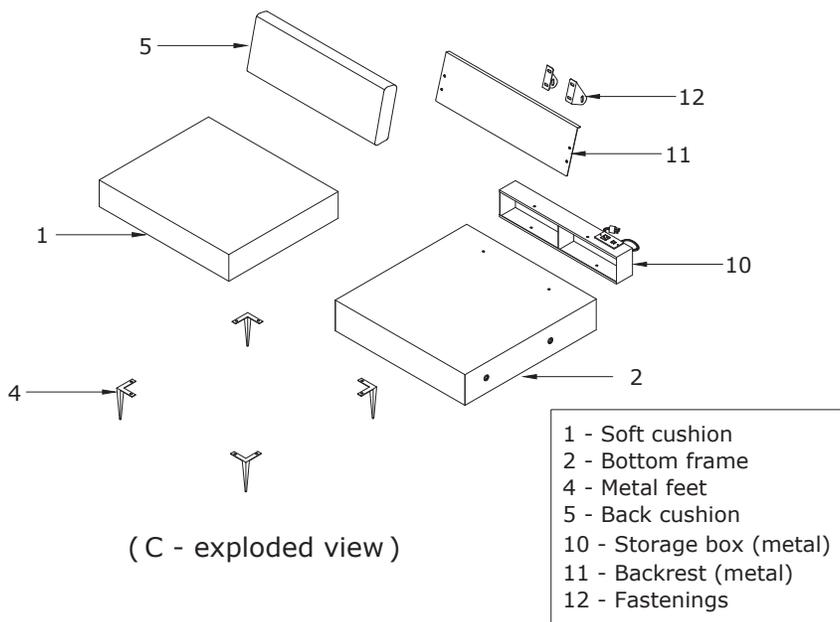

## Accessories list-C

Handle screw



**a** x2

M8\*40

Hand knob



**c** x2

M8


Screw



**e** x8

M8\*25

Nylon gasket



**f** x14

M8

Screw



**i** x6

M8\*15


Nut



**j** x6

M8

Screw



**k** x2

M8\*30

Gasket



**l** x2


M8

---

# Module C


---

(step 1)

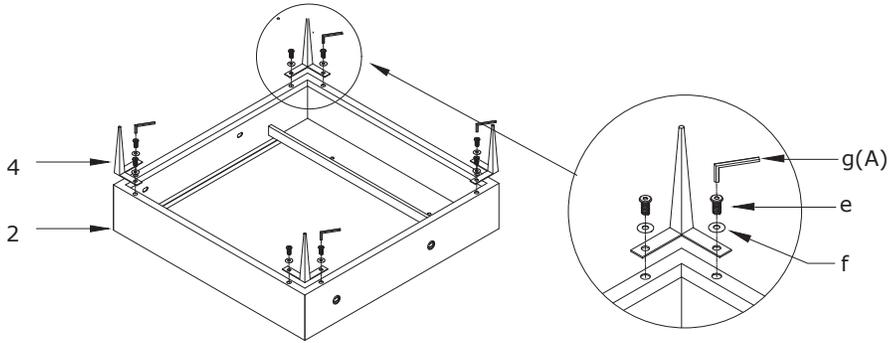

---

(step 2)

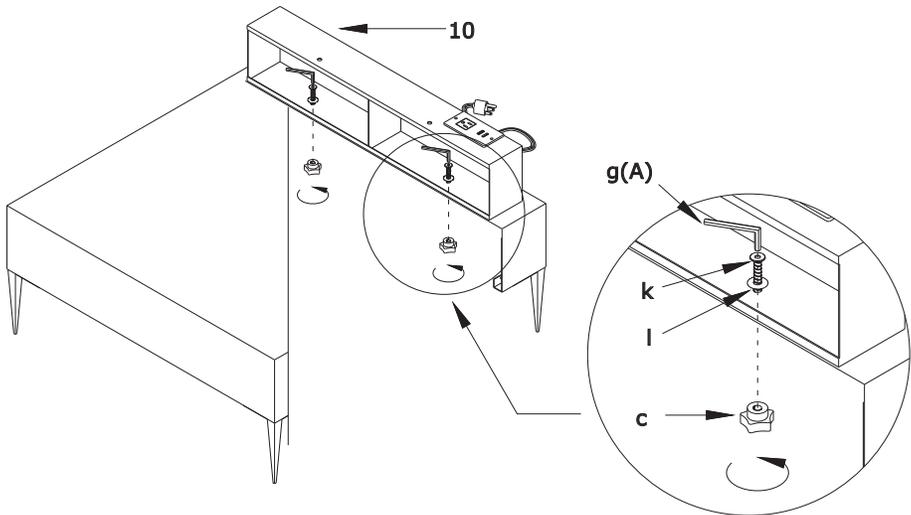


Note: First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.

---

# Module C

---


(step 3)

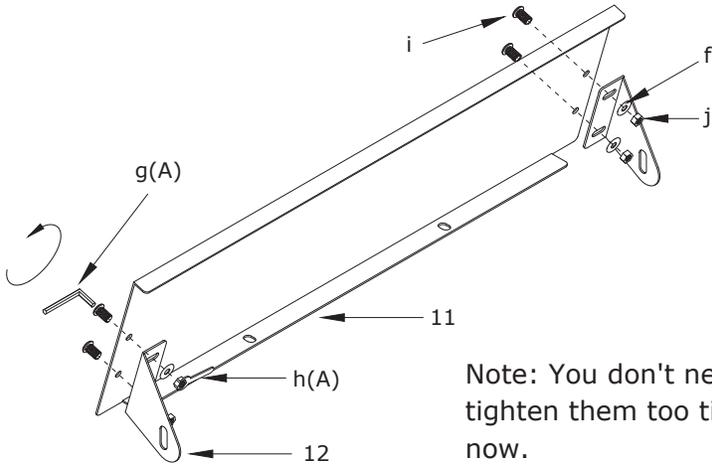

Note: You don't need to tighten them too tightly now.

---

(step 4)

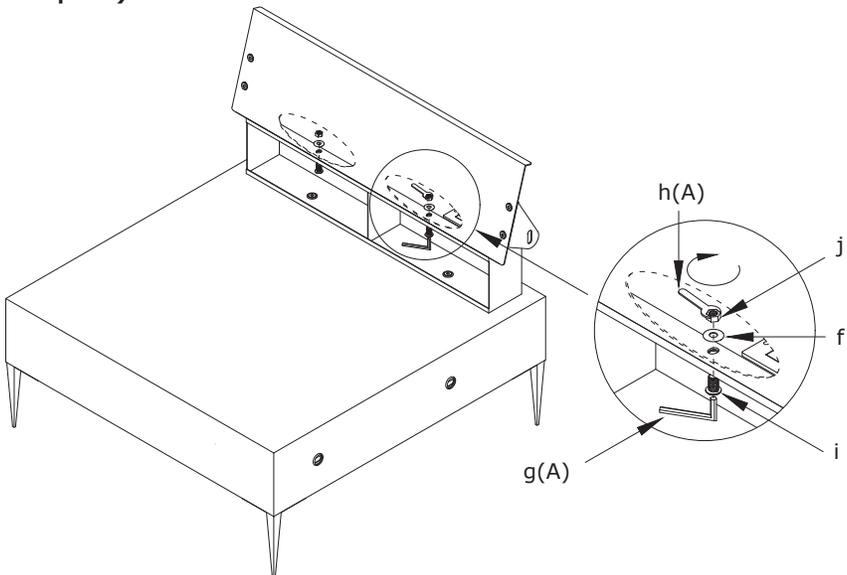


---

# Module C


---


(step 5)

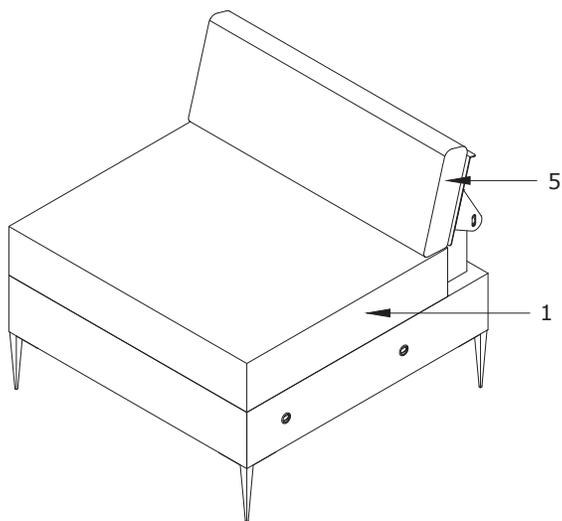

---

**D**

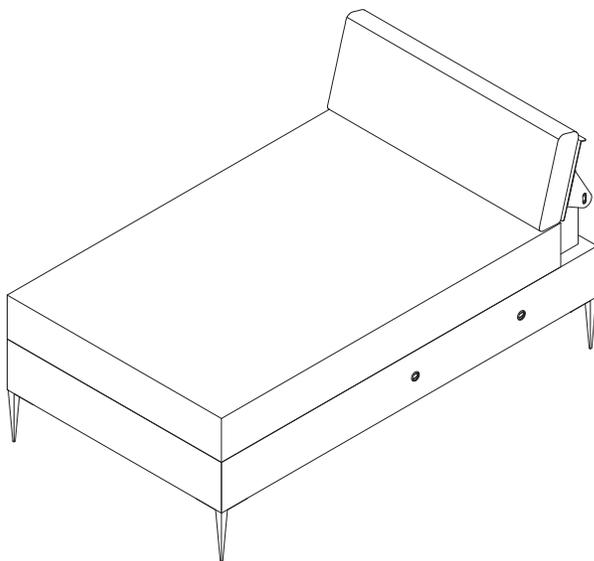

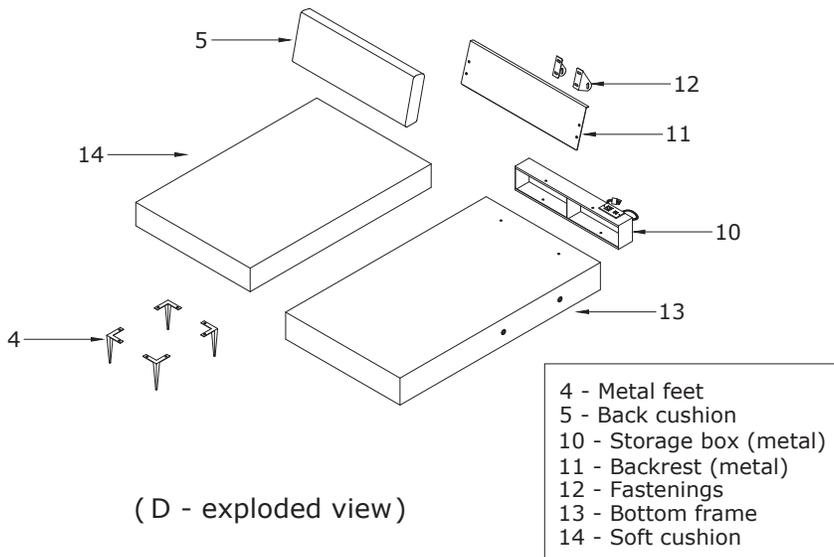

## Accessories list-D

Handle screw



**a** x2

M8\*40

Hand knob



**c** x2

M8


Screw



**e** x8

M8\*25

Nylon gasket

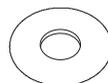

**f** x14

M8

Screw



**i** x6

M8\*15

Nut



**j** x6

M8

Screw



**k** x2

M8\*30

Gasket



**l** x2


M8

---

# Module D


---

(step 1)

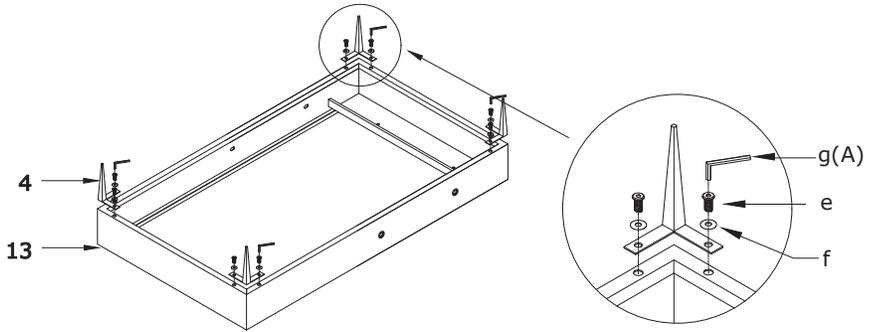

---

(step 2)

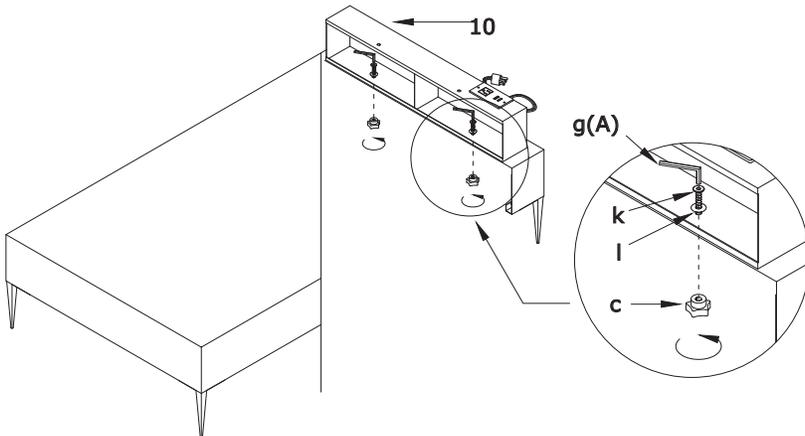


Note: First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.

---

# Module D

---


(step 3)

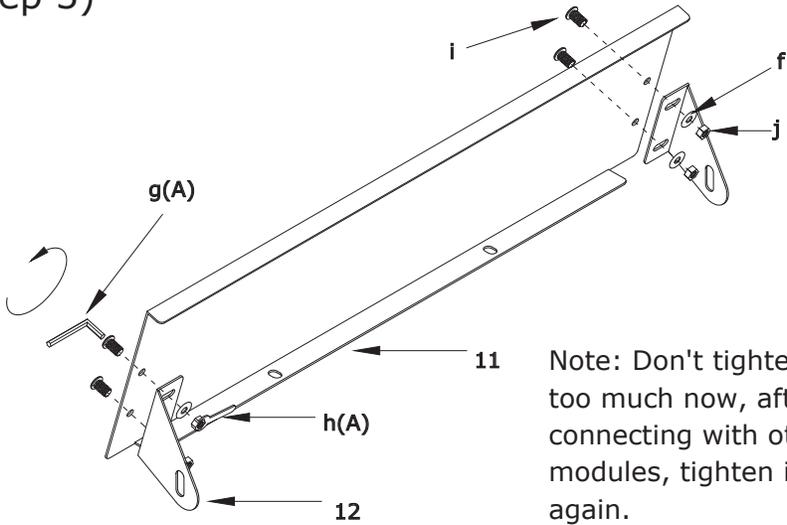

Note: Don't tighten it too much now, after connecting with other modules, tighten it again.

---

(step 4)

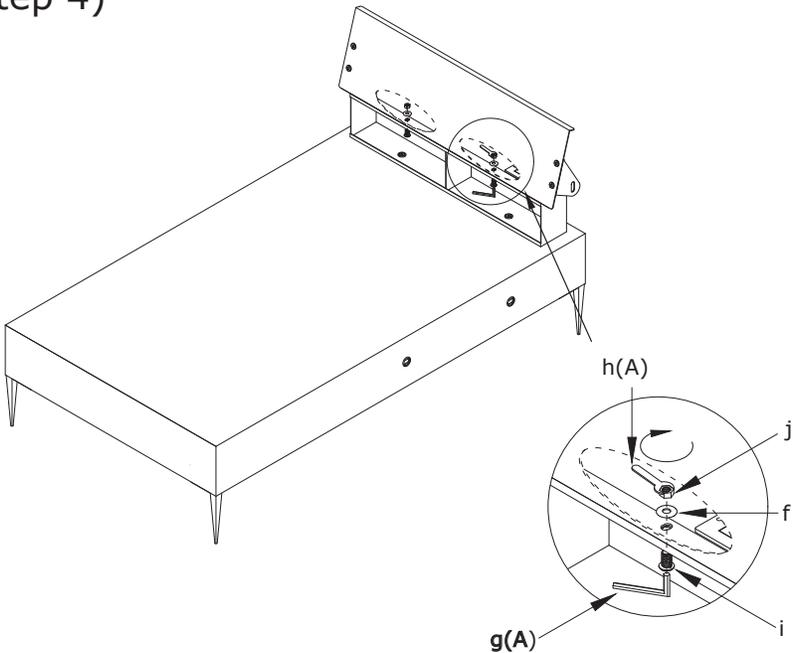


---

# Module D


---


(step 5)

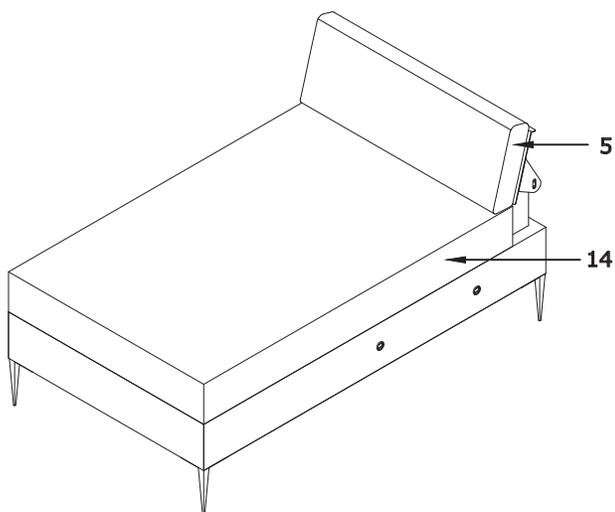

---

**E**

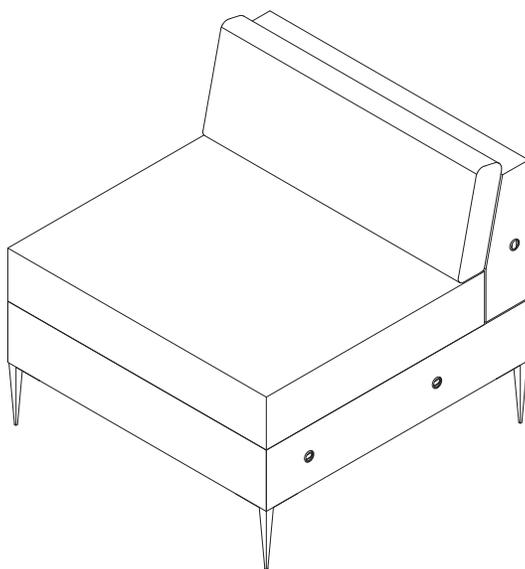

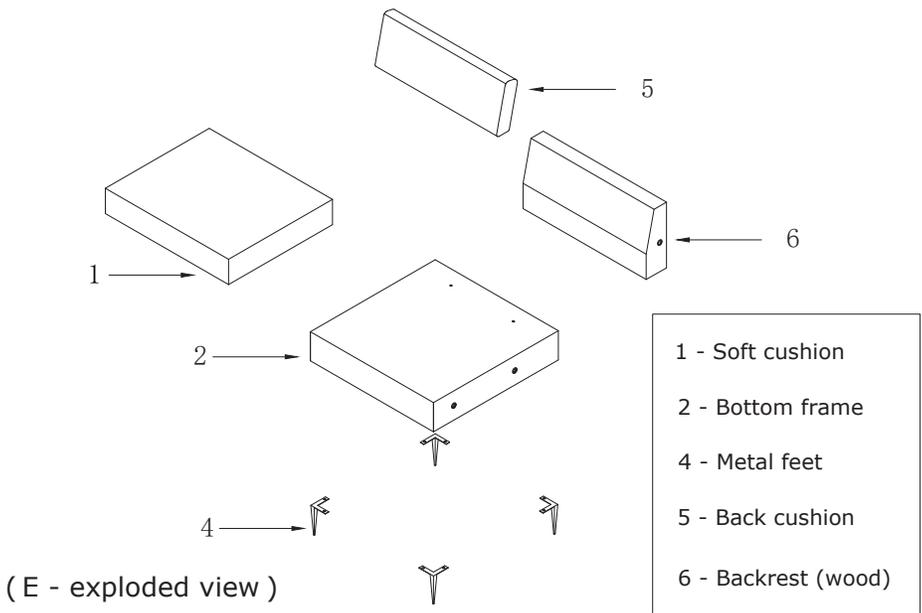

## Accessories list-E

Handle screw



**a** x4

M8\*40

Hand knob



**c** x2

M8

Screw rod



**d** x1

M8\*80


Screw



**e** x8

M8\*25

Nylon gasket

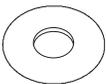

**f** x8

M8

Nut



**j** x1

M8

Gasket



**l** x1


M8

---

# Module E


---

(step 1)

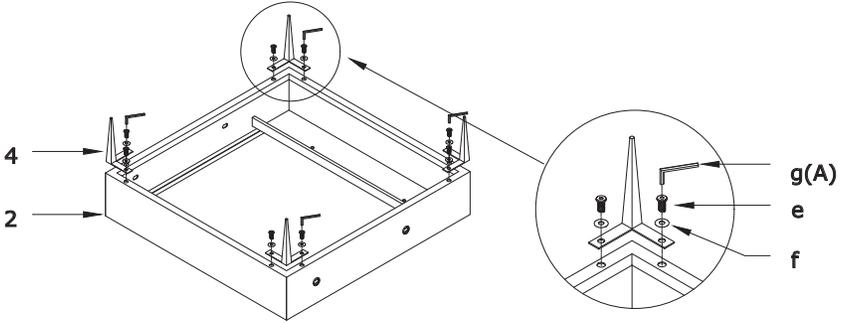

---

(step 2)

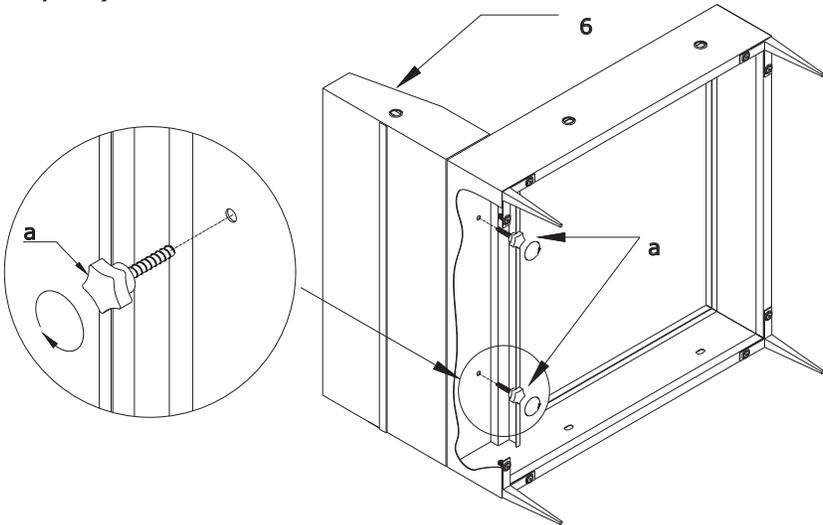


Note: First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.

---

# Module E


---

(step 3)

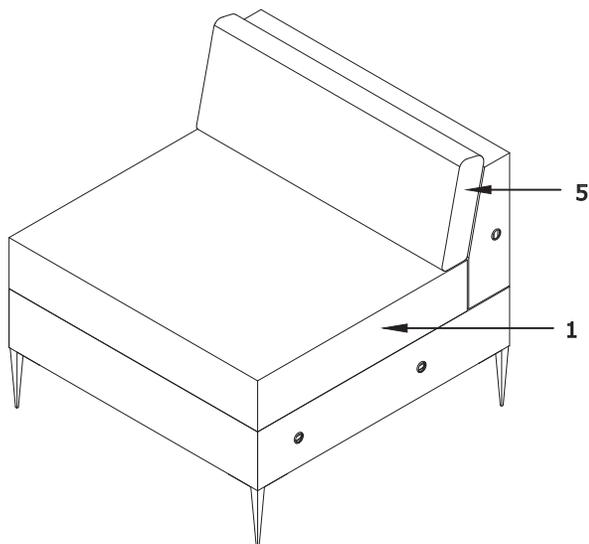

---

**F**

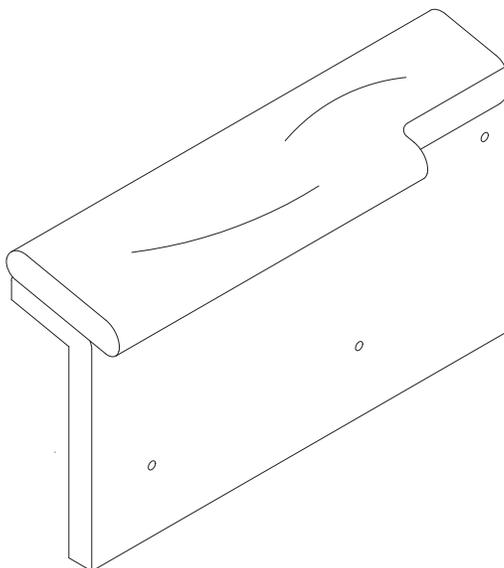

---

# Accessories list-F

---

Handle screw



**b** x3

M10\*40


---

## Combination steps

### For example:(A+B+C)

---

(step 1)

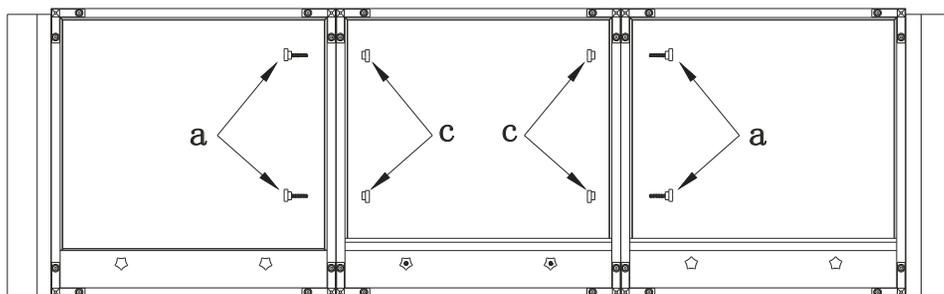


---

# Combination steps

## For example:(A+B+C)

---

(step 2)

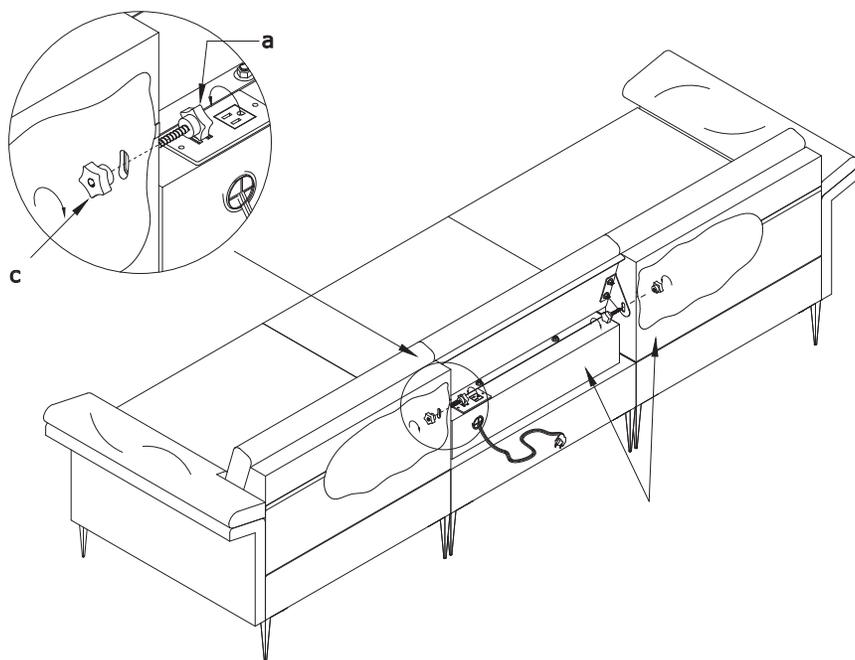

Note: You can attach any backrest to any base frame.


---

# Combination steps

## For example:(A+B)

---

(step 1)

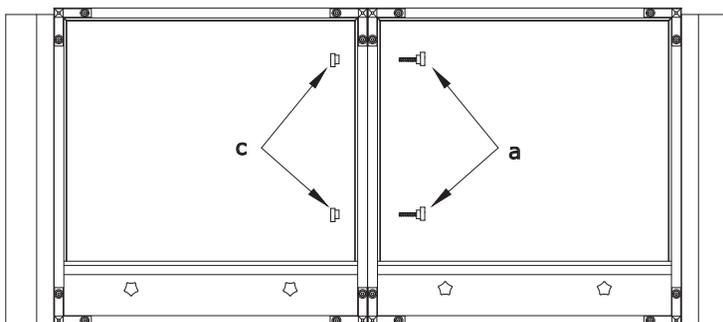


---

# Combination steps

## For example:(A+B)

---

(step 2)

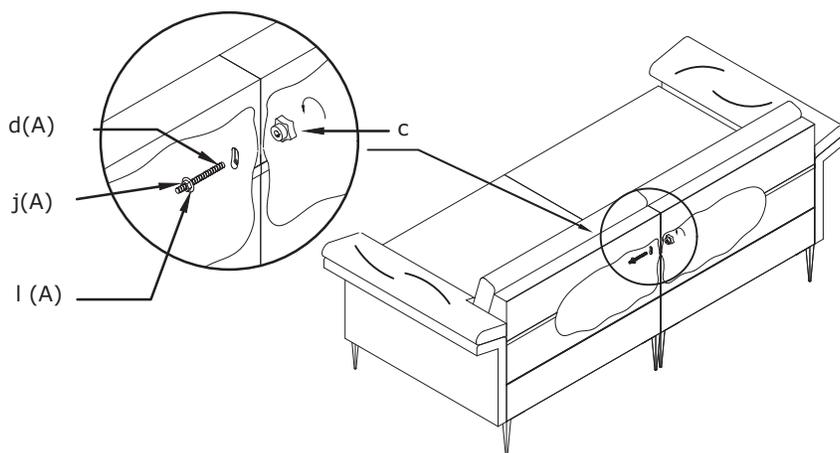

---

**EN**

With your inspiring rating, COSTWAY will be more consistent to offer you **EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

---

**DE**

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen **EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE** zu bieten!

---

**FR**

Avec votre évaluation inspirante, COSTWAY continuera à fournir une **EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !**

---

**ES**

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle **EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.**

---

**IT**

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti **ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!**

---

**PL**

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze **WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.**

**US** office: Fontana

**UK** office: Ipswich

**AU** office: Truganina

**DE** office: Hamburg

**FR** office: Saint Vigor d'Ymonville

**PL** office: Gdańsk